 

 

 

 
 
 

 
 
 

 
 
 

 

 

 
 
 

 

 
 
 
 
 

 

 
 
 
 
 

 
 
 
 
 

 
 
 

 

 

 

 
 
 

 

 

 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Mute		Mute		9		9
	Vol+		Vol +		0		0
	Vol-		Vol -		-/--		Shift + Guide
	Prog+		Ch +		PRE		Pre Ch
	Prog-		Ch -		Up/P+		Up
	[≡]/TXT		Text		Down/P-		Down
	[ + ]/Display		Info		Right/Vol+		Right
	Tv/DVB-T		Smart		Left/Vol-		Left
	[ ]/Line		Media		[II]/Tv Menu		Menu
	1		1		-IXI-/Exit		Exit
	2		2		Timer/Sleep		Shift + Power
	3		3		-I/I-/P.STD		Shift + Format
	4		4		-I/I-/S.STD		Shift + Dual
	5		5		[<>]/P.Size		Format
	6		6		Open/Close		Eject
	7		7		Rec		Rec





Originale	Sostituto
	Stop
	Play
	Pause
	<< <<
	>> >>
	<<< <<<
	>>> >>>
	Red
	Green
	Yellow
	Blue
	+  Shift + 3D
	+  Shift + AV
	+  Shift + TV/R
	+  Shift + Subt
	+  Shift + Text
	+  Shift + Info

Originale	Sostituto
	Dual
	Subt
	Options
	TV/R
	+  Shift + Ch -
	+  Shift + Ch +
	Guide
	3D
	Back
	AV
	Ok

