






 

 


Originale	Sostituto
Power	Power
Netflix	+  Shift + Red / Netflix /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Originale	Sostituto
Vol-	Vol-
i	Info / Angle
PR-	CH- / Page-
Menu	Menu / Home
Up	Up
Q.Menu	D.Menu / Top
Left	Left
OK	OK
Right	Right
Back	Back / Return
Down	Down
EXit	Exit / Cancel / Clear
World	Smart / List
Camera/Music/Ph	Display / Media
Guide	Guide / EPG / -/--
*/o	Picture / Format
Games	AV / Input / RDS





Originale	Sostituto	Originale	Sostituto
 [≡]/Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Lang	 Audio / Lang I/II		
 [≡]..	 Subtitle / EQ		
 [-O-]	 Zoom / Size		
 <<<	 <<< / Tune-		
	 Pause / Step / Freeze		
 >>>	 >>> / Tune+		
 ●	 Rec / Rec Mode		
 ▶	 Play / Slow		
 ■	 Stop / Hold		

Originale	Sostituto

