




 

 







Originale	Sostituto
	Mute
	Mute / Dimmer
	Power
	Power
	S.Mode /
	D.Menu / Top
	S.Mode /
	Shift + D.Menu / Top Menu
	P.Mode / Title
	Sound / Title
	FAV + / Go To
	Shift + CH+ /
	FAV - / Angle
	Shift + CH- /
	<<
	<< / Tune-
	Play / Pause
	Play / Pause
	Shift + Play /
	>>
	>> / Tune+
	Reveal
	Smart / List
	I<<
	I<< / Preset-
	Stop
	Stop / Hold
	>>I
	>>I / Preset+
	Rec
	Rec / Rec Mode
	Red / Program
	Shift + Red / Netflix / Search

Originale	Sostituto
	Red / Program
	Red / Netflix / Search
	Green / Intro
	Green / APP / Repeat
	Yellow / Repeat
	Shift + Yellow / YouTube / Repeat
	Yellow / Repeat
	Yellow / YouTube / Repeat
	Blue / A-B
	Blue / Prime Video / Random
	Index / D.Disp.
	Display / Media
	Sub-T
	Subtitle / EQ
	Audio / Lang
	Audio / Lang I/II
	Size / Zoom
	Zoom / Size
	Info
	Info / Angle
	TV / Radio
	TV/Radio /
	FAV
	Fav / Marker / PC
	Sleep
	Sleep / Timer
	Menu
	Menu / Home
	Exit
	Exit / Cancel / Clear
	Input
	AV / Input / RDS
	EPG
	Guide / EPG / -/-



