 





 

 

 

 

 

 

 

 







 

 

 





Originale	Sostituto
 Open / Close	 Eject / Surround
 Power	 Power
 VCR	 Shift + 4
 DVD	 Shift + 2
 Input	 AV / Input / RDS
 1 / Tracking -	 Shift + Left
 1 / Tracking -	 1
 2	 2
 3 / Tracking +	 3
 3 / Tracking +	 Shift + Right
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / VCR	 TV/Radio /

Originale	Sostituto
 0	 0
 Clear	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up / PR +	 Up
 Up / PR +	 CH+ / Page+
 Setup	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Timer	 Sleep / Timer
 Down / PR -	 CH- / Page-
 Down / PR -	 Down
 Display	 Display / Media
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II





Originale		Sostituto	
	<< REW		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	FF >>		>> / Tune+
	I<< Prev		I<< / Preset-
	Stop		Stop / Hold
	Next >>I		>>I / Preset+
	Skip		Back / Return
	Title / PBC		Sound / Title
	Slow -		Vol-
	Slow +		Vol+
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Zoom		Zoom / Size
	Angle		Info / Angle

Originale		Sostituto	





Originale	Sostituto
Open / Close	Eject / Surround
Power	Power
VCR	Shift + 4
DVD	Shift + 2
Input	AV / Input / RDS
1 / Tracking -	Shift + Left
1 / Tracking -	1
2	2
3 / Tracking +	3
3 / Tracking +	Shift + Right
4	4
5	5
6	6
7	7
8	8
9	9
TV / VCR	TV/Radio /

Originale	Sostituto
0	0
Clear	Exit / Cancel / Clear
Menu	Menu / Home
Up / PR +	Up
Up / PR +	CH+ / Page+
Setup	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Timer	Sleep / Timer
Down / PR -	CH- / Page-
Down / PR -	Down
Display	Display / Media
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II



Program


**Originale**
**Sostituto**

	<< REW		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	FF >>		>> / Tune+
	I<< Prev		I<< / Preset-
	Stop		Stop / Hold
	Next >>I		>>I / Preset+
	Skip		Back / Return
	Title / PBC		Sound / Title
	Slow -		Vol-
	Slow +		Vol+
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Zoom		Zoom / Size
	Angle		Info / Angle

**Originale**
**Sostituto**