



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Bass-		CH- / Page-
	Optical		8		Down / Vol-		Vol-
	Mute		Mute / Dimmer		Down / Vol-		Down
	AUX		7		Treb-		<< / Tune-
	BT		9		Flat		Red / Netflix / Search
	HDMI ARC		0		Movie		Green / APP / Repeat
	Bass+		CH+ / Page+		Music		Yellow / YouTube / Repeat
	Up / Vol+		Up				
	Up / Vol+		Vol+				
	Treb+		>> / Tune+				
	Left / I<<		I<< / Preset-				
	Left / I<<		Left				
	Play/Pause / Pair		Smart / List				
	Play/Pause / Pair		Pause / Step / Freeze				
	Play/Pause / Pair		Play / Slow				
	Right / >>I		>>I / Preset+				
	Right / >>I		Right				

