










 










 


 








Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CH List	 Smart / List
 0	 0
 Return/Back	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS

Originale	Sostituto
 Left	 Left
 OK	 OK
 Right	 Right
 Home	 D.Menu / Top
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+
 Info	 Info / Angle
 PR+	 CH+ / Page+
 Vol-	 Vol-
 EPG	 Guide / EPG / -/--
 PR-	 CH- / Page-
 Rec	 Rec / Rec Mode
 Nicam I/II	 Audio / Lang I/II
 Text	 Text / Goto
 AD/Subpage	 Sound / Title





Originale	Sostituto
FAV/Size	Fav / Marker / PC
FAV/Size	Zoom / Size
Quick/Hold	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Play	Play / Slow
Pause/Index	Pause / Step / Freeze
<</Reveal	<< / Tune-
>>/Mix	>> / Tune+
Stop/Cancel	Stop / Hold

Originale	Sostituto

