































 






Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	CH/Page+	 CH+ / Page+
Mute	 Mute / Dimmer	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Zoom	 Zoom / Size	CH/Page-	 CH- / Page-
TV	 TV/Radio /	1. ?	 1
Text	 Text / Goto	2abc	 2
TV/SAT	 AV / Input / RDS	3def	 3
Menu	 Menu / Home	4ghi	 4
Menu Up	 Up	5jkl	 5
Info	 Info / Angle	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 Guide / EPG / -/-
Menu Down	 Down	0/10	 0
Volume+	 Vol+	FAV Pref.	 Fav / Marker / PC
Epg	 Smart / List	Red	 Red / Netflix / Search



Originale	Sostituto	Originale	Sostituto
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

