


 

 
 


 





 







 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 02	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info
 0	 0
 R	 Back
 □	 Media
 Sleep	 Sleep
 ■	 Smart

Originale	Sostituto
 Up / P+	 Up
 Up / P+	 Ch +
 Audio	 Dual
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Down / P-	 Down
 Down / P-	 Ch -
 Text	 Text
 Input	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text Cancel	 Stop
 Text Reveal	 Play





Originale	Sostituto	Originale	Sostituto
 Text Timer	 >>		
 Text Up	 >>		
 Text Index	 <<		
 Text Size	 REC MODE		
 Text Hold			
 Text Down	 I<<		

Originale	Sostituto

