


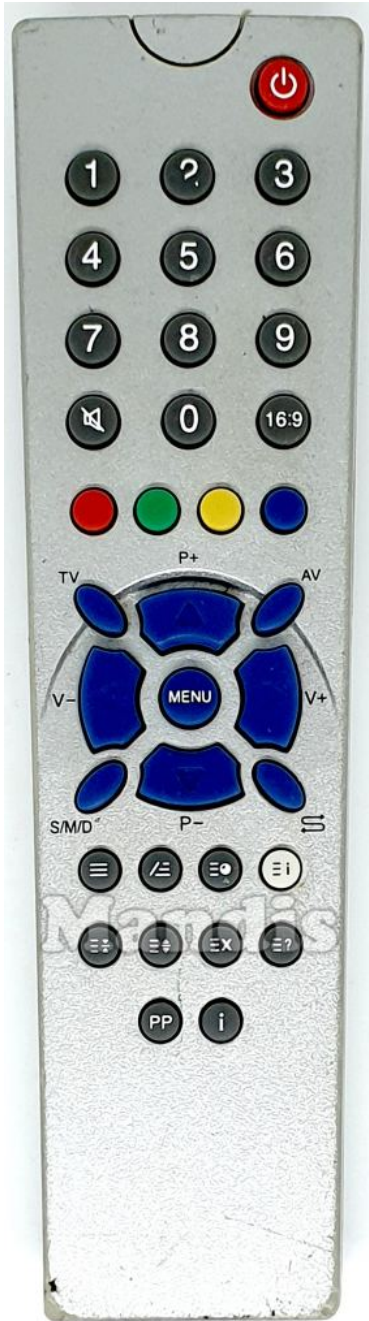

Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Mute	Mute
16:9	Format
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

Originale	Sostituto
TV	TV/R
AV	AV
Up / P+	Up
Up / P+	Ch +
Down / P-	Down
Down / P-	Ch -
Right / V+	Right
Right / V+	Vol +
Left / V-	Left
Left / V-	Vol -
Menu	Menu
Menu	Ok
S / M / D	Smart
Recall	Pre Ch
Recall	Back
≡	Text
/≡	Options





Originale	Sostituto	Originale	Sostituto
	≡o		Sleep
	≡i		Info
	Hold		Pause
	Size		Eject
	≡X		Exit
	≡?		D. Menu
	PP		Media
	i		Shift + Info

