

























































 

 




 




 
 
 
 

 















 



















 


Originale	Sostituto	Originale	Sostituto
Power	 Power	9	 9
Sleep	 Sleep / Timer	Stop/Exit/Cancel	 Exit / Cancel / Clear
Mute	 Mute / Dimmer	Stop/Exit/Cancel	 Stop / Hold
Mode	 AV / Input / RDS	-/--	 Guide / EPG / -/--
1	 1	0	 0
2	 2	Back	 Back / Return
3	 3	SYS Menu	 Menu / Home
Eject/Nicam2	 Eject / Surround	Rec	 Rec / Rec Mode
Eject/Nicam2	 Sound / Title	Up	 Up
4	 4	CH+	 CH+ / Page+
5	 5	DTV/Radio	 TV/Radio /
6	 6	Left	 Left
TXT/MIX	 Text / Goto	Enter	 OK
Play/Pause	 Play / Slow	Right	 Right
Play/Pause	 Pause / Step / Freeze	Vol-	 Vol-
7	 7	Down	 Down
8	 8	CH-	 CH- / Page-















































Originale	Sostituto	Originale	Sostituto
Vol+	 Vol+	Yellow/Repeat	 +  Shift + Green / APP / REPEAT
Return	 +  Shift + Back / Return	Yellow/Repeat	 Yellow / YouTube / Repeat
Menu DVD	 D.Menu / Top	Blue/A-B	 Blue / Prime Video / Random
Setup	 Setup / OPT /	Blue/A-B	 +  Shift + Yellow / YouTube /
Display	 Display / Media	<</Hold	 +  Shift + Stop /
Search/FAV	 +  Shift + Red / Netflix /	<</Hold	 << / Tune-
Search/FAV	 Fav / Marker / PC	>>/Index	 >> / Tune+
Slow/EPG	 +  Shift + Play /	l<</Size	 l<< / Preset-
Slow/EPG	 +  Shift + Guide / EPG / -/-	l<</Size	 +  Shift + Zoom /
Language/Info	 Audio / Lang I/II	>>/Reveal	 >> / Preset+
Language/Info	 Info / Angle	Subtitle	 Subtitle / EQ
Zoom/List	 Zoom / Size	Title/Subpage	 +  Shift + Sound / Title
Zoom/List	 Smart / List	FAV-	 +  Shift + Down
Red/Angle	 Red / Netflix / Search	FAV+	 +  Shift + Up
Red/Angle	 +  Shift + Info / Angle		
Green/Program	 Green / APP / Repeat		
Green/Program	 +  Shift + TV/Radio / Program		
















 








 

 
 







 


Originale	Sostituto	Originale	Sostituto
Standby	 Power	8	 8
Auto / Eject	 Eject / Surround	9	 9
Mute	 Mute / Dimmer	Input	 AV / Input / RDS
P.Mode	 Picture / Format	0	 0
S.Mode	 Sound / Title	Recall	 Back / Return
Info	 Info / Angle	Sleep	 Sleep / Timer
Nicam	 Audio / Lang I/II	Up	 Up
1	 1	Left	 Left
2	 2	Enter	 OK
3	 3	Right	 Right
Menu	 Menu / Home	Down	 Down
4	 4	CH-	 CH- / Page-
5	 5	CH+	 CH+ / Page+
6	 6	Vol-	 Vol-
Exit / D.Setup	 Setup / OPT /	Vol+	 Vol+
Exit / D.Setup	 Exit / Cancel / Clear	Text / Slow	 Text / Goto
7	 7	Text / Slow	 Shift + Play / Slow

























Originale	Sostituto	Originale	Sostituto
Hold / Play/Pause	 Play / Slow	FAV+ / Goto	 +  Shift + Up
Hold / Play/Pause	 +  Shift + Stop /	FAV+ / Goto	 +  Shift + Text /
Hold / Play/Pause	 Pause / Step / Freeze	Red / D.Prog	 TV/Radio /
Page+ / Stop	 Stop / Hold	Red / D.Prog	 Red / Netflix / Search
Page+ / Stop	 +  Shift + CH+ /	Green / Step	 +  Shift + Pause / Step /
Page- / Zoom	 Zoom / Size	Green / Step	 Green / APP / Repeat
Page- / Zoom	 +  Shift + CH- /	Yellow / RPT	 +  Shift + Green / APP /
[≡i] / I<<	 I<< / Preset-	Yellow / RPT	 Yellow / YouTube / Repeat
[≡□] / >>I	 >>I / Preset+	Blue / A-B	 +  Shift + Yellow / YouTube /
[≡?] / <<	 << / Tune-	Blue / A-B	 Blue / Prime Video / Random
[≡●] / >>	 >> / Tune+	List / Angle	 +  Shift + Info / Angle
EPG / D.Menu	 D.Menu / Top	List / Angle	 Smart / List
EPG / D.Menu	 Guide / EPG / -/--	SUB-T	 Subtitle / EQ
FAV / D.Title	 +  Shift + Sound / Title	Aspect	 +  Shift + Picture / Format
FAV / D.Title	 Fav / Marker / PC	Rec	 Rec / Rec Mode
FAV- / D.Disp	 Display / Media		
FAV- / D.Disp	 +  Shift + Down		








Originale	Sostituto	Originale	Sostituto
Standby	 Power	Audio	 Audio / Lang I/II
Auto	 Smart / List	CH+	 CH+ / Page+
Mute	 Mute / Dimmer	Vol-	 Vol-
1	 1	Display	 Display / Media
2	 2	CH-	 CH- / Page-
3	 3	Up	 Up
4	 4	Left	 Left
5	 5	OK	 OK
6	 6	Right	 Right
7	 7	Menu	 Menu / Home
8	 8	Down	 Down
9	 9	Exit	 Exit / Cancel / Clear
-/--	 +  Shift + Guide / EPG / -/--	Input	 AV / Input / RDS
0	 0	P.Mode	 Picture / Format
Recall	 Back / Return	S.Mode	 Sound / Title
Vol+	 Vol+	Sleep	 Sleep / Timer
Aspect	 +  Shift + Picture / Format	FAV	 Fav / Marker / PC



Originale	Sostituto	Originale	Sostituto
FAV-	 +  Shift + CH- /	Stop	 Stop / Hold
FAV+	 +  Shift + CH+ /	I<<	 I<< / Preset-
EPG	 Guide / EPG / -/--	>>I	 >>I / Preset+
Text	 Text / Goto	Red	 Red / Netflix / Search
Hold	 +  Shift + Stop /	Green	 Green / APP / Repeat
Tv/Radio	 TV/Radio /	Yellow	 Yellow / YouTube / Repeat
Subtitle	 Subtitle / EQ	Blue	 Blue / Prime Video / Random
Index	 Info / Angle		
Size	 Zoom / Size		
Reveal	 Setup / OPT /		
Subpage	 Eject / Surround		
Media	 +  Shift + Display / Media		
Play	 Play / Slow		
Pause	 Pause / Step / Freeze		
<<	 << / Tune-		
>>	 >> / Tune+		
Rec	 Rec / Rec Mode		





Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Chan.Down	 CH- / Page-
Mute	 Mute / Dimmer	1	 1
Txt Stop	 Stop / Hold	2	 2
Info	 Rec / Rec Mode	3	 3
Sleep Timer	 Picture / Format	4	 4
Text	 Setup / OPT /	5	 5
TV/AV	 AV / Input / RDS	6	 6
Menu	 Menu / Home	7	 7
Menu Up	 Up	8	 8
Menu Left	 Left	9	 9
OK Enter	 OK	Guide -/-- 1.	 Guide / EPG / -/--
Menu Right	 Right	0/10	 0
Menu Off	 Exit / Cancel / Clear	2.Fav P/C 2.	 Fav / Marker / PC
Menu Down	 Down		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		

