





 



















































 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		Down		Down
	1		1		Back		Back / Return
	2		2		Voice		Sound / Title
	3		3		+		Fav / Marker / PC
	4		4		Vol+		Vol+
	5		5		Mute		Mute / Dimmer
	6		6		P+		CH+ / Page+
	7		7		Vol-		Vol-
	8		8		P-		CH- / Page-
	9		9		<<		<< / Tune-
	0		0		Play/Pause		Pause / Step / Freeze
	Guía		Guide / EPG / -/--		Play/Pause		Play / Slow
	Menu		Menu / Home		>>		>> / Tune+
	Up		Up		I<		I<< / Preset-
	Left		Left		Stop		Stop / Hold
	OK		OK		Rec		Rec / Rec Mode
	Right		Right				

