


 

 



 


 
 







 




Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DTV / ATV	 D.Menu / Top
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Originale	Sostituto
 Vol +	 Vol+
 MTS	 Audio / Lang I/II
 CH +	 CH+ / Page+
 Vol -	 Vol-
 REC List	 Smart / List
 CH -	 CH- / Page-
 FAV List	 Fav / Marker / PC
 REC	 Rec / Rec Mode
 Freeze	 Pause / Step / Freeze
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Originale	Sostituto
DISPLAY	MEDIA DISPLAY Display / Media
	NETFLIX SEARCH Red / Netflix / Search
	APP REPEAT Green / APP / Repeat
	YouTube REPEAT A-B Yellow / YouTube / Repeat
	Prime Video RANDOM Blue / Prime Video / Random
GUIDE << / Guide	TUNE- << / Tune-
GUIDE << / Guide	GUIDE EPG Guide / EPG / -/--
TIMESHIFT Play/Pause / Timeshift	SLOW Play / Slow
ASPECT >> / Aspect	TUNE+ >> / Tune+
CANCEL << / Cancel	PRESET- << / Preset-
SUB.PG >> / Subpage	PRESET+ >> / Preset+
INDEX Stop / Index	ANGLE INFO Info / Angle
INDEX Stop / Index	HOLD Stop / Hold
TV/RADIO TV / Radio	PROGRAM TV/RADIO TV/Radio /
SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ
REVEAL Reveal	OPT-TOOLS SETUP Setup / OPT /
SIZE Size	SIZE ZOOM Zoom / Size

Originale	Sostituto
	SHIFT + HOLD Shift + Stop /
	GOTO TEXT Text / Goto

