






 
 



 




 





 
 

 

 


 
 
 

 



 


 


 
 

 
 

 



 

 

 








 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Ch-	 Down
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Vol+	 Right
 2	 2	 Vol-	 Vol -
 3	 3	 Vol-	 Left
 4	 4	 OK	 Ok
 5	 5	 Red/EPG	 Red
 6	 6	 Red/EPG	 Guide
 7	 7	 Yellow/Subtitle	 Yellow
 8	 8	 Yellow/Subtitle	 Subt
 9	 9	 Blue/TTX	 Text
 0	 0	 Blue/TTX	 Blue
 Menu	 Menu	 Green/Audio	 Green
 Exit	 Exit	 Green/Audio	 Dual
 Ch+	 Ch +	 i	 Info
 Ch+	 Up	 FAV	 Pre Ch
 Ch-	 Ch -	 TV/Radio	 TV/R

Originale	Sostituto	Originale	Sostituto
			
			
			
			
			
			
			
			
			
			
			
			
			





Originale		Sostituto		Originale		Sostituto	
	Video		Format				
	Prog		Sleep				
	File		Media				
	Device		Smart				
	REC		Rec				
	Zoom		Eject				
	Stop		Stop				
	Prev		I<<				
	Next		>>I				
	Play/Pause		Play				
	Play/Pause		Pause				
	<<		<<				
	>>		>>				

