


 






 
 
 
 


 
 
 
 
 
 


 
 
 

 
 


 


 
 




 
 



 








 

 
 
 
 
 
 

 
 

 




Originale		Sostituto		Originale		Sostituto	
	Standby		Power		TV / Radio		TV/R
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		Right		Right
	4		4		Down		Down
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Record		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Recall		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	Subtitle		Subt		Media		Media





	Originale	Sostituto
	I<< Prev	I<<
	Play	Play
	<< Rew	<<
	USB	Smart
	>>I Next	>>I
	Pause	Pause
	>> Fwd	>>
	Red	Red
	Green	Green
	Yellow	Yellow
	Blue	Blue

Originale	Sostituto

