











 







 



 



 



 









 




 








 



 



 




 






























 



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Home	 Shift + Menu /
 Source	 AV / Input / RDS	 P+	 CH+ / Page+
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 i	 Info / Angle
 4	 4	 Back	 Back / Return
 5	 5	 Mouse	 Display / Media
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 OK
 EPG	 Guide / EPG / -/--	 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+	 YouTube	 Shift + Yellow / YouTube /
 Vol-	 Vol-	 prime video	 Shift + Blue / Prime
 Mute	 Mute / Dimmer	 f	 Smart / List
 APPS	 Shift + Green / APP / Repeat	 Red	 Red / Netflix / Search

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Home	 Shift + Menu /
 Source	 AV / Input / RDS	 P+	 CH+ / Page+
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 i	 Info / Angle
 4	 4	 Back	 Back / Return
 5	 5	 Mouse	 Display / Media
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 OK
 EPG	 Guide / EPG / -/--	 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+	 YouTube	 Shift + Yellow / YouTube /
 Vol-	 Vol-	 prime video	 Shift + Blue / Prime
 Mute	 Mute / Dimmer	 f	 Smart / List
 APPS	 Shift + Green / APP / Repeat	 Red	 Red / Netflix / Search





Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 Text	 Text / Goto
 Rec	 Rec / Rec Mode
 I<<	 I<< / Preset-
 I>>	 I>> / Preset+
 MTS	 Fav / Marker / PC
 Sub	 Subtitle / EQ

Originale	Sostituto

