

 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Right	 Right
 3D	 3D	 Left	 Left
 Tv Input	 TV/R	 OK	 Ok
 AV Input	 AV	 Red	 Red
 Menu	 Menu	 Green	 Green
 [+]/Aspect	 Format	 Yellow	 Yellow
 N	 D. Menu	 Blue	 Blue
 (<>)/Surround	 Dual	 [≡]/Text	 Text
 i	 Info	 [≡♦]/STTL	 Subt
 X/Exit	 Exit	 [≡i]/Index	 List
 Internet	 Smart	 [≡+]/Hold	 Sleep
 Viera Tools	 Media	 1	 1
 Guide	 Guide	 2	 2
 Option	 Options	 3	 3
 Return/Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6

Originale	Sostituto	Originale	Sostituto
 Right	 Right	 TV	 AUX
 Left	 Left	 DVD	 SAT
 OK	 Ok	 MUTE	 SHIFT
 Red	 Red	 PLAY MODE	 REC MODE
 Green	 Green	 TV	 DUAL
 Yellow	 Yellow	 II	 SUBT
 Blue	 Blue	 ■	 OPT
 [≡]/Text	 Text	 ⏮	 AD
 [≡♦]/STTL	 Subt	 ▶	 SETTINGS
 [≡i]/Index	 List	 ⏭	 LIST
 [≡+]/Hold	 Sleep	 SOUND	 PICTURE
 1	 1	 E-MANUAL	 ECO
 2	 2	 REPEAT	 3D
 3	 3	 ZOOM	 TIMER
 4	 4	 D.MENU	 AV
 5	 5	 TOP MENU	
 6	 6	 DISPLAY	



