


 





 

 



 





 

 

 



 



 







Originale	Sostituto
 Power DVD	 Power
 Rec Check	 Rec
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --/--	 Guide
 CH+ / Tracking/V-Lock +	 Ch +
 CH- / Tracking/V-Lock -	 Ch -
 AV / Input Select	 AV
 Output DVD	 Media

Originale	Sostituto
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause / Step	 Pause
 Play	 Play
 Top Menu	 D. Menu
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display	 Info
 Return	 Back
 Timer	 Shift + AV
 Play Mode	 Shift + Play
 Position	 Pre Ch




Memory

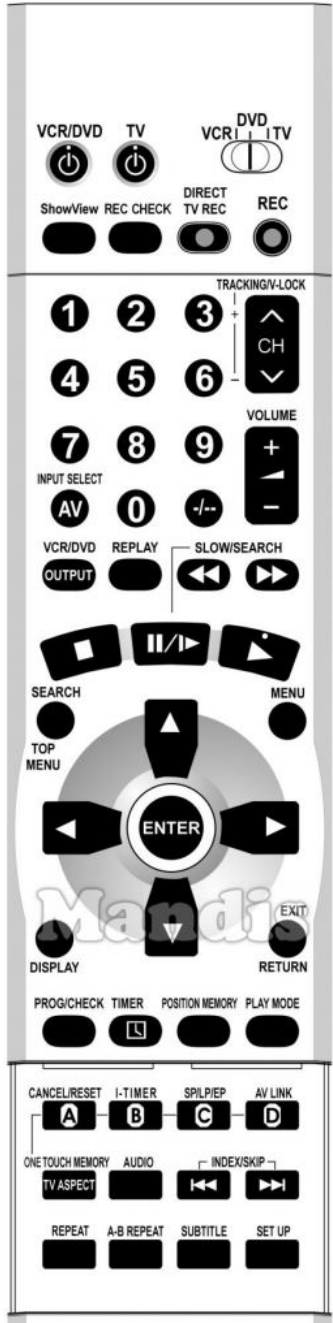

Originale	Sostituto	Originale	Sostituto
Replay	List		
A / Cancel/Reset	Red		
B / I-Timer	Green		
C / SP/LP/EP	Yellow		
D / AV Link	Blue		
One Touch	Smart		
Audio	Dual		
I<< Index/Skip	I<<		
Index/Skip >>I	>>I		
Repeat	Text		
A-B Repeat	SHIFT + REPEAT Text		
Subtitle	Subt		
Setup	Options		

Originale	Sostituto



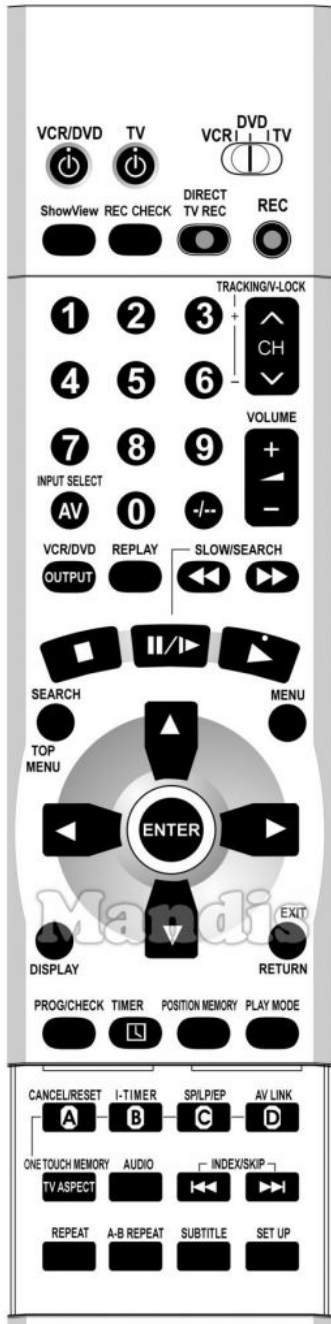

Originale	Sostituto
Power VCR	Power
ShowView	Smart
Rec Check	Options
Direct TV Rec	+ Shift + Rec
Rec	Rec
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/-	Guide
CH+ / Tracking/V-Lock +	Ch +

Originale	Sostituto
CH- / Tracking/V-Lock -	Ch -
AV / Input Select	AV
Output VCR	Media
Replay	List
<< Slow/Search	<<
Slow/Search >>	>>
Stop	Stop
Pause / Step	Pause
Play	Play
Menu	Menu
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Display	Info
Exit	Exit



