
 



 










 

 

 

 

 












Originale	Sostituto
 Power	 Power
 SD	 Smart
 [+]	 Info
 Tv/AV	 AV
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Tv/Text	 Text
 F.P.	 Eject

Originale	Sostituto
 Index	 List
 Hold	 Options
 N	 Media
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9



