






 



 



 


























 
 



 



 



 



 



 



 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Stop		Stop
	FL Display		Smart		Pause		Pause
	TUNER BAND		Green		Play		Play
	AUX		Red		Disc Skip		Sleep
	Top Menu		D. Menu		SFC		Eject
	Menu		Menu		CH-		Ch -
	Up		Up		CH+		Ch +
	Left		Left		Vol+		Vol +
	Enter		Ok		Vol-		Vol -
	Right		Right		Muting		Mute
	Down		Down		Subwoofer		Shift + 4
	Display		Info		Action		Options
	Return		Back		Subtitle		Subt
	I<<		I<<		Audio		Dual
	>>I		>>I		Angle		Format
	<<		<<		Marker		3D
	>>		>>		CH Select		Shift + Media







 








 



 

 









 

 

 


Originale	Sostituto
Test	Shift + 6
Mix 2CH	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
>10 / Enter	Guide
Disc	Pre Ch
Seat Position	Shift + 1
Center Focus	TV/R
Super Surround	Shift + 3

Originale	Sostituto
Pro Logic	Shift + 5
Disc Manager	List
Play Mode	Shift + Play
Cancel	Exit
Repeat	Text
A-B Repeat	Shift + Text
Cinema	Media
Timer	AV



 


 


 






 


Originale	Sostituto	Originale	Sostituto
 Power	 Power		
 TV Vol-	 Vol -		
 TV Vol+	 Vol +		
 TV / Video	 AV		
 CH+	 Ch +		
 CH-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 ≥10	 Guide		





Originale	Sostituto	Originale	Sostituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10		Guide
	CH+		Ch +
	CH-		Ch -
	Stop		Stop
	<<		<<
	>>		>>

Originale	Sostituto
	Play
	Play

