











 



 

 

 







 

 








 
 





Originale	Sostituto
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Home	 Menu / Home
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Guide	 Guide / EPG / -/--
 Source	 AV / Input / RDS
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 OK	 OK
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play / Slow
 Stop	 Stop / Hold

Originale	Sostituto
 Smart Colours	 Display / Media
 123#	 1
 Rakuten Tv	 TV/Radio /
 Netflix	 Red / Netflix / Search
 FPlay	 Fav / Marker / PC

