


































 










 































Originale		Sostituto		Originale		Sostituto	
	Power		Power		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Yellow		Yellow / YouTube / Repeat
	1		1		Blue		Blue / Prime Video / Random
	2		2		Vol+		Vol+
	3		3		Vol-		Vol-
	4		4		P+		CH+ / Page+
	5		5		P-		CH- / Page-
	6		6		Up		Up
	7		7		Left		Left
	8		8		OK		OK
	9		9		Right		Right
	0		0		Down		Down
	DEL		Exit / Cancel / Clear		Back		Back / Return
	TXT		Text / Goto		Rec		Rec / Rec Mode
	Menu		Menu / Home		Picture		Picture / Format
	Guide		Guide / EPG / -/--		Play / Pause		Play / Slow
	Red		Red / Netflix / Search		<<		<< / Tune-





Originale	Sostituto	Originale	Sostituto
	Stop		Stop / Hold
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+

