


 



 


 

 




Originale	Sostituto
 Power	 Power
 Info	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Zoom	 0
 0 / Zoom	 Eject
 Audio	 Dual
 Mute	 Mute
 Recall	 Back
 FAV	 Pre Ch

Originale	Sostituto
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu
 Exit	 Exit
 Blue / Pause	 Blue
 Blue / Pause	 Pause
 Red / Text	 Red
 Red / Text	 Text
 Multivideo	 Smart
 Yellow / Subtitle	 Yellow






 

 



 




 




















 











 

 


 



 
 

 
 



 





Originale	Sostituto	Originale	Sostituto
 Yellow / Subtitle	 Subt		
 TV / AV	 AV		
 Green / P/N	 Green		
 SAT	 Media		
 TV / Radio	 TV/R		
 EPG	 Guide		

 

 



 

 




 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH+		Ch +
	Red		Red		CH-		Ch -
	Green		Green		Up		Up
	Yellow		Yellow		Down		Down
	Blue		Blue		Right		Right
	TV/SAT		AV		Left		Left
	TV/Radio		TV/R		OK		Ok
	Zoom		Eject		Vol+		Vol +
	List		List		Vol-		Vol -
	Audio		Dual		P+		>>
	EPG		Guide		P-		<<
	Timer		Shift + AV		Recall		Pre Ch
	Text		Text		FAV		Shift + Pre Ch
	Exit		Exit		1		1
	Menu		Menu		2		2
	M/P		Media		3		3
	Mute		Mute		4		4





Originale		Sostituto		Originale		Sostituto	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Info		Info				
	Pause		Pause				

