







 



 

 


 
 

 
 















 









 































 


Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Info	 Info / Angle
 EPG	 Guide / EPG / -/--

Originale	Sostituto
 Prog+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 Prog-	 CH- / Page-
 Left	 Left
 Up	 Up
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Menu	 Menu / Home
 Fav	 Fav / Marker / PC
 Format	 Shift + Picture / Format
 Texe	 Smart / List
 Subtitle	 Subtitle / EQ
 Red/A	 Red / Netflix / Search
 Green/B	 Green / APP / Repeat





Originale	Sostituto
 Yellow/C	 Yellow / YouTube / Repeat
 Blue/D	 Blue / Prime Video / Random
 Mix	 Shift + Text /
 Reveal	 Pause / Step / Freeze
 Index	 Play / Slow
 Subpage	 Rec / Rec Mode
 TXT	 Text / Goto
 Cancel	 Exit / Cancel / Clear
 Size	 Zoom / Size
 Hold	 Stop / Hold
 P Mode	 Picture / Format
 S Mode	 Sound / Title
 MTS	 Display / Media
 3DNR	 Setup / OPT /

Originale	Sostituto

