
 


 
 


 


 



 

 

 













 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 DVD Setup	 Media
 Title	 List
 Menu (Blue)	 D. Menu
 USB/CR	 3D
 Nicam/A2	 Shift + Options
 Sleep	 Sleep
 Aspect	 Format
 Eject	 Eject
 Display	 Shift + Info
 Auto	 Back
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 DTV	 Smart
 Source	 AV
 Menu	 Menu

Originale	Sostituto
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +/-	 Shift + Guide





Originale		Sostituto		Originale		Sostituto	
	EPG		Guide		I<</Reveal		I<<
	Recall		Pre Ch		>>I/Sbpage		>>I
	CH+		Ch +		Subtitle (Green)		Subt
	CH-		Ch -		Zoom		Shift + Eject
	Info		Info		Goto		Options
	FAV		Shift + Pre Ch		Subtitle (Blue)		Shift + Subt
	Tv/Radio		TV/R		Angle		Shift + TV/R
	Audio		Dual		Red/Program		Red
	Vol+		Vol +		Green/Intro		Green
	Vol-		Vol -		Yellow/Repeat		Yellow
	Text		Text		Blue/A-B		Blue
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Rec/Hold		Rec				
	<</Index		<<				
	>>/Size		>>				

