

 
 

 






 




 
 

 


 


 



 


 
 






 




 


 
 

 
 



 

 
 
 
 


 






 
 

 



 
 
 





 
 

 
 







Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Tv/Radio	 TV/R
 Source	 AV	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Mute	 Mute
 3	 3	 CH+	 Ch +
 4	 4	 CH-	 Ch -
 5	 5	 Menu	 Menu
 6	 6	 Exit	 Exit
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 [*]/Display	 Info	 Enter	 Ok
 Recall	 Back	 TXT	 Text
 Freeze	 Options	 Play	 Play
 P.Mode	 Format	 Pause/Time Shift	 Pause
 S.Mode	 Dual	 Stop/EPG	 Stop

Originale	Sostituto	Originale	Sostituto
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 TV	 DVD
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 UP	 AV
 TOP MENU	 DISPLAY INFO	 MENU	 OK
 EXIT	 BACK	 VOL +	 CH +
 HOME	 SMART	 VOL -	 CH -
 APP	 MEDIA	 1	 2
 1	 2	 3	 4
 2	 3	5	6
3	4	7	8
4	5	9	0
5	6	GUIDE	PRE-CH
6	7	A	B
7	8	C	D
8	9		
9	0		
0	FAV		



