

 









 

 















 







| Originale | Sostituto |
|---|---|
|  |  Power |
|  |  Mute / Dimmer |
|  |  Stop / Hold |
|  |  Audio / Lang I/II |
|  |  Subtitle / EQ |
|  |  Picture / Format |
|  |  Sleep / Timer |
|  |  TV/Radio / |
|  |  Setup / OPT / |
|  |  Text / Goto |
|  |  AV / Input / RDS |
|  |  Menu / Home |
|  |  Up |
|  |  Info / Angle |
|  |  Left |
|  |  Exit / Cancel / Clear |
|  |  Down |

| Originale | Sostituto |
|---|---|
|  |  Vol+ |
|  |  Smart / List |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  Display / Media |
|  |  CH- / Page- |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  0 |
|  |  Fav / Marker / PC |



