

 




















 

 







 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 Recall	 RETURN BACK
 Vol+	 + VOL
 Vol-	 VOL -
 Nicam	 SOUND DUAL

Originale	Sostituto
 Sleep	 PROG SLEEP
 Display	 DISPLAY INFO
 CH+	 + CH
 CH-	 CH -
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Aspect	 PICTURE FORMAT
 Source	 TIMER AV
 P.Mode	 SHIFT + PICTURE FORMAT
 S.Mode	 SHIFT + SOUND DUAL
 Exit	 CLEAR EXIT
 Menu	 TOP MENU MENU
 Media	 APP MEDIA
 Play / Pause	 PLAY MODE



