 

 
 

 






Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Recall	 Back / Return
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Freeze	 Pause / Step / Freeze	 Exit	 Exit / Cancel / Clear
 P.Mode	 Picture / Format	 Up	 Up
 S.Mode	 Sound / Title	 Left	 Left
 TV / Radio	 TV/Radio /	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Play / Pause	 Play / Slow
 3	 3	 Down	 Down
 4	 4	 Stop	 Stop / Hold
 5	 5	 Vol +	 Vol+
 6	 6	 TXT	 Text / Goto
 7	 7	 CH +	 CH+ / Page+
 8	 8	 Vol -	 Vol-
 9	 9	 Mute	 Mute / Dimmer
 Display	 Display / Media	 CH -	 CH- / Page-
 0	 0	 Mix / Fav. List	 Fav / Marker / PC

Originale	Sostituto	Originale	Sostituto
 Recall	 Back / Return	 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear	 Up	 Up
 Left	 Left	 Enter	 OK
 Right	 Right	 Play / Pause	 Play / Slow
 Down	 Down	 Stop	 Stop / Hold
 Vol +	 Vol+	 TXT	 Text / Goto
 CH +	 CH+ / Page+	 Vol -	 Vol-
 Mute	 Mute / Dimmer	 CH -	 CH- / Page-
 Mix / Fav. List	 Fav / Marker / PC		





	Originale	Sostituto
	Size / Subtitle	 Subtitle / EQ
	Cancel / Audio	 Audio / Lang I/II
	Zoom	 Zoom / Size
	<< / Index	 << / Tune-
	>> / Hold	 >> / Tune+
	I<< / Reveal	 I<< / Preset-
	>>I / Subpage	 >>I / Preset+
	Red	 Red / Netflix / Search
	Green	 Green / APP / Repeat
	Yellow	 Yellow / YouTube / Repeat
	Blue	 Blue / Prime Video / Random

Originale	Sostituto

