


















 
































































 

 











Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC

Originale	Sostituto
 Vol+	 Vol+
 MTS I/II	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Sub-T	 Subtitle / EQ
 CH-	 CH- / Page-
 Aspect	 Shift + Picture / Format
 Freeze	 Shift + Pause / Step /
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Originale		Sostituto		Originale		Sostituto	
	Exit		Exit / Cancel / Clear		List		Smart / List
	Red		Red / Netflix / Search		T.Shift		TV/Radio /
	Green		Green / APP / Repeat		USB		Shift + 8
	Yellow		Yellow / YouTube / Repeat		EPG		Guide / EPG / -/--
	Blue		Blue / Prime Video / Random				
	<< / Text/CC		<< / Tune-				
	<< / Text/CC		Text / Goto				
	Play/Pause /		Play / Slow				
	Play/Pause /		Pause / Step / Freeze				
	>> / Reveal		>> / Tune+				
	I<<< / Hold		I<<< / Preset-				
	I<<< / Hold		Shift + Stop /				
	>>I / Size		>>I / Preset+				
	>>I / Size		Zoom / Size				
	Stop / Index		Stop / Hold				
	Root		Info / Angle				
	Repeat		Shift + Green / APP / Repeat				

