



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
Off Timer	Sleep / Timer
Guide	Guide / EPG / -/--
Up	Up
Tv/AV	AV / Input / RDS
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[=]/Text	Text / Goto

Originale	Sostituto
[=◇]/F.P.	Smart / List
[=i]/Index	Display / Media
[=+]/Hold	Shift + Stop /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
C	Back / Return
0/VCR	0
0/VCR	Shift + 4
i	Info / Angle
CH+	CH+ / Page+



