

 




 






















 
 












 




 


















 





















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up / P+	 CH+ / Page+
 1	 1	 Left / Vol-	 Left
 2	 2	 Left / Vol-	 Vol-
 3	 3	 Right / Vol+	 Right
 4	 4	 Right / Vol+	 Vol+
 5	 5	 Down / P-	 Down
 6	 6	 Down / P-	 CH- / Page-
 7	 7	 Red	 Red / Netflix / Search
 8	 8	 Green	 Green / APP / Repeat
 9	 9	 Yellow / FT-	 Yellow / YouTube / Repeat
 0 / AV	 0	 Blue / FT+	 Blue / Prime Video / Random
 0 / AV	 AV / Input / RDS	 Text Memo	 Smart / List
 P↔P	 Back / Return	 Info	 Info / Angle
 Timer	 Sleep / Timer	 Mute	 Mute / Dimmer
 Menu	 Menu / Home	 Text Cancel	 Display / Media
 Enter	 OK	 Text	 Text / Goto
 Up / P+	 Up	 Skip	 Sound / Title

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up / P+	 CH+ / Page+
 1	 1	 Left / Vol-	 Left
 2	 2	 Left / Vol-	 Vol-
 3	 3	 Right / Vol+	 Right
 4	 4	 Right / Vol+	 Vol+
 5	 5	 Down / P-	 Down
 6	 6	 Down / P-	 CH- / Page-
 7	 7	 Red	 Red / Netflix / Search
 8	 8	 Green	 Green / APP / Repeat
 9	 9	 Yellow / FT-	 Yellow / YouTube / Repeat
 0 / AV	 0	 Blue / FT+	 Blue / Prime Video / Random
 0 / AV	 AV / Input / RDS	 Text Memo	 Smart / List
 P↔P	 Back / Return	 Info	 Info / Angle
 Timer	 Sleep / Timer	 Mute	 Mute / Dimmer
 Menu	 Menu / Home	 Text Cancel	 Display / Media
 Enter	 OK	 Text	 Text / Goto
 Up / P+	 Up	 Skip	 Sound / Title



