



 

 
 

 


 
 

 

 



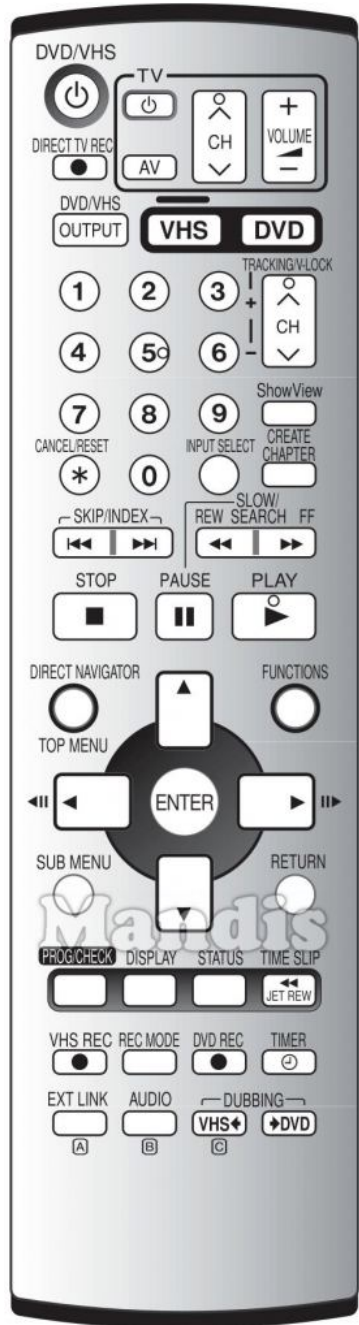


Originale	Sostituto
 VHS/DVD Power	 Power
 Direct TV Rec	 Subt
 VHS/DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel / Reset	 Exit
 Input Select	 Guide
 CH+ / Tracking/V-Lock+	 Ch +
 CH- / Tracking/V-Lock-	 Ch -

Originale	Sostituto
 Create Chapter	 TV/R
 I<< Skip	 I<<
 Skip >>I	 >>I
 REW / << Slow/Search	 <<
 FF / Slow/Search	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Direct Navigator / Top Menu	 D. Menu
 Functions	 List
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Sub Menu	 Menu
 Return	 Back





Originale	Sostituto
VHS/DVD Power	Power
Direct TV Rec	Subt
VHS/DVD	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Cancel / Reset	Exit
Input Select	AV
CH+ / Tracking/V-Lock+	Ch +
CH- / Tracking/V-Lock-	Ch -

Originale	Sostituto
ShowView	Media
I<< Index	I<<
Index >>I	I>>
REW	REW
FF	FF
Stop	Stop
Pause	Pause
Play	Play
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Return	Back
Prog/Check	Sleep
Display	Info
Jet Rew	Shift + I<<



