




 













 



























 








Originale	Sostituto
 Power	 Power
 Setup	 Options
 Mute	 Mute
 DVD/DVB	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide
 Scan	 3D
 Preview	 Pre Ch

Originale	Sostituto
 Info	 Info
 TTX/TIT	 Text
 Menu	 Menu
 Red/Zoom	 Red
 Green/A-B	 Green
 Yellow/3D	 Yellow
 Blue/Angle	 Blue
 Audio	 Dual
 Subtitle	 Subt
 PAL/NISC	 Format
 Repeat	 Shift + Text
 Tv/Radio	 TV/R
 USB/Card	 AV
 Stop	 Stop
 Rec	 Rec
 CH+	 Ch +
 CH-	 Ch -





Originale		Sostituto	
CH+	Up		Up
CH-	Down		Down
CLASS+	Right/Class+		Right
CLASS-	Left/class-		Left
ENTER	Enter	OK	Ok
	Play		Play
	Pause		Pause
	>>		>>
	<<		<<
	>>		>>
	<<		<<
VOL+	Vol+		Vol +
VOL-	Vol-		Vol -
RETURN	Return		Back

Originale	Sostituto

