



 
 






 


 


 




 

 
 




 




Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/Multivideo	 0
 Tv/Radio	 TV/R
 Mute	 Mute
 Audio	 Dual
 Blue	 Blue
 Green	 Green
 Red	 Red

Originale	Sostituto
 Yellow	 Yellow
 EPG	 Guide
 Tv/AV	 AV
 Text	 Text
 FAV+/P+	 Ch +
 FAV-/P-	 Ch -
 Info	 Info
 Up/CH+	 Up
 Down/CH-	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Exit	 Exit
 A/B	 Smart





Originale		Sostituto		Originale		Sostituto	
	USB		Media				
	Rec		Rec				
	Play		Play				
	Pause/PP		Pause				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	Stop		Stop				
	FAV		Pre Ch				
	Recall		Back				

