



Originale	Sostituto
 Standby	 Power
 Mute	 Mute / Dimmer
 L / R	 Audio / Lang I/II
 FAV	 Fav / Marker / PC
 Subt.	 Subtitle / EQ
 GOTO	 Shift + Goto / Text
 Text	 Text / Goto
 Recall	 Back / Return
 Menu	 Menu / Home
 Up / CH +	 Up
 Up / CH +	 CH+ / Page+
 EPG	 Guide / EPG / -/-
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK	 OK
 Right / Vol +	 Vol+
 Right / Vol +	 Right

Originale	Sostituto
 Info	 Info / Angle
 Down / CH -	 Down
 Down / CH -	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 USB	 Shift + 8
 4	 4
 5	 5
 6	 6
 TV / Radio	 TV / Radio /
 7	 7
 8	 8
 9	 9
 0	 0
 Play	 Play / Slow





	Originale	Sostituto	Originale	Sostituto
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	Rec	Rec / Rec Mode		
	Repeat	Shift + Green / Green / APP / APP / REPEAT		
	<<	<< / Tune-		
	>>	>> / Tune+		
	I<<	I<< / Preset-		
	>>I	>>I / Preset+		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		

