 


 





 
 





 











 

 





 
 

 

 

 


 



 
 


 






 



 






 
 

 


 


 




 

 









Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up / CH +	 Up
 Mute	 Mute	 Up / CH +	 Ch +
 1	 1	 Down / CH -	 Down
 2	 2	 Down / CH -	 Ch -
 3	 3	 Right / Vol +	 Right
 4	 4	 Right / Vol +	 Vol +
 5	 5	 Left / Vol -	 Left
 6	 6	 Left / Vol -	 Vol -
 7	 7	 OK	 Ok
 8	 8	 Sub-T	 Subt
 9	 9	 Text	 Text
 0	 0	 Audio	 Dual
 Menu	 Menu	 Mode	 Smart
 Exit / Last	 Exit	 EPG	 Guide
 Exit / Last	 Back	 Favor	 Pre Ch
 TV / R	 TV/R	 Red / I<<	 Red
 Info	 Info	 Red / I<<	 I<<

Originale	Sostituto	Originale	Sostituto
 Up / CH +	 Up	 Up / CH +	 Ch +
 Down / CH -	 Down	 Down / CH -	 Ch -
 Right / Vol +	 Right	 Right / Vol +	 Vol +
 Right / Vol +	 Right	 Left / Vol -	 Left
 Left / Vol -	 Left	 Left / Vol -	 Vol -
 OK	 Ok	 OK	 Ok
 Sub-T	 Subt	 Sub-T	 Subt
 Text	 Text	 Text	 Text
 Audio	 Dual	 Audio	 Dual
 Mode	 Smart	Mode	Smart
EPG	Guide	EPG	Guide
Favor	Pre Ch	Favor	Pre Ch
Red / I<<	Red	Red / I<<	Red
Red / I<<	I<<	Red / I<<	I<<



