 

 
 

 
 

 
 


 

 
 


 





 






 
 

 
 
 


 







 


 
 






Originale	Sostituto	Originale	Sostituto
 Power	 Power	 CH+	CH+
 Auto/Eject	 Smart	 CH-	Ch -
 Mute	 Mute	 Aspect	Format
 1	 1	 D.Disp	Media
 2	 2	 Display	Info
 3	 3	 Enter	Ok
 4	 4	 Up	Up
 5	 5	 Down	Down
 6	 6	 Right	Right
 7	 7	 Left	Left
 8	 8	 LCD Menu	Menu
 9	 9	 Exit/DVD Setup	Exit
 0	 0	 Input	AV
 -/--	 Shift + Guide	 P-Mode	Shift + Format
 Recall	 Pre Ch	 S.Mode	Shift + Dual
 Vol-	 Vol -	 Sleep	Sleep
 Vol+	 Vol +	 FAV	Shift + Pre Ch

Originale	Sostituto	Originale	Sostituto
 TV	 TV	 MUTE	MUTE
 DVD	 DVD	 SHIFT	SHIFT
 SAT	 SAT	 AUX	AUX
 AUX	 AUX	 PLAY MODE	PLAY MODE
 Play	 Play	 REC MODE	REC MODE
 Pause	 Pause	 FF	FF
 Stop	 Stop	 RR	RR
 Eject	 Eject	 SOUND	SOUND
 FF	 FF	 AD	AD
 RR	 RR	 SETTINGS	SETTINGS
 SETTINGS	 SETTINGS	 LIST	LIST
 LIST	 LIST	 DUAL	DUAL
 DUAL	 DUAL	 SUBT	SUBT
 SUBT	 SUBT	 OPT	OPT
 OPT	 OPT	 PROG	PROG
 PROG	 PROG	 SEARCH	SEARCH
 SEARCH	 SEARCH	 PICTURE	PICTURE
 PICTURE	 PICTURE	 ECO	ECO
 ECO	 ECO	 SLEEP	SLEEP
 SLEEP	 SLEEP	 TV/R	TV/R
 TV/R	 TV/R	 FORMAT	FORMAT
 FORMAT	 FORMAT	 3D	3D
 3D	 3D	 E-MANUAL	E-MANUAL
 E-MANUAL	 E-MANUAL	 REPEAT	REPEAT
 REPEAT	 REPEAT	 ZOOM	ZOOM
 ZOOM	 ZOOM	 TIMER	TIMER
 TIMER	 TIMER	 D.MENU	D.MENU
 D.MENU	 D.MENU	 TEXT	TEXT
 TEXT	 TEXT	 Up	Up
 Up	 Up	 Down	Down
 Down	 Down	 Right	Right
 Right	 Right	 Left	Left
 Left	 Left	 TOP MENU	TOP MENU
 TOP MENU	 TOP MENU	 MENU	MENU
 MENU	 MENU	 CLEAR	CLEAR
 CLEAR	 CLEAR	 EXIT	EXIT
 EXIT	 EXIT	 RETURN	RETURN
 RETURN	 RETURN	 BACK	BACK
 BACK	 BACK	 HOME SMART	HOME SMART
 HOME SMART	 HOME SMART	 APP MEDIA	APP MEDIA
 APP MEDIA	 APP MEDIA	 + VOL	+ VOL
 + VOL	 + VOL	 + CH	+ CH
 + CH	 + CH	 - VOL	- VOL
 - VOL	 - VOL	 - CH	- CH
 - CH	 - CH	 1	1
 1	 1	 2	2
 2	 2	 3	3
 3	 3	 4	4
 4	 4	 5	5
 5	 5	 6	6
 6	 6	 7	7
 7	 7	 8	8
 8	 8	 9	9
 9	 9	 0	0
 0	 0	 GUIDE	GUIDE
 GUIDE	 GUIDE	 PRE-CH	PRE-CH
 PRE-CH	 PRE-CH	 A	A
 A	 A	 B	B
 B	 B	 C	C
 C	 C	 D	D
 D	 D	 Mandis SHOP	Mandis SHOP
 Mandis SHOP	 Mandis SHOP	 www.mandis.tv	www.mandis.tv



