



 



























 

 

 



































Originale		Sostituto		Originale		Sostituto	
	Power		Power		Up		Up
	EPG		Guide / EPG / -/--		Display		Display / Media
	REP		TV/Radio /		Left		Left
	Mute		Mute / Dimmer		OK		OK
	Rec List		Shift + Rec / Rec Mode		Right		Right
	CH List		Smart / List		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Down		Down
	Eject		Eject / Surround		Exit		Exit / Cancel / Clear
	Rec		Rec / Rec Mode		1		1
	Stop		Stop / Hold		2		2
	I<<		I<< / Preset-		3		3
	>>I		>>I / Preset+		4		4
	Pause		Pause / Step / Freeze		5		5
	Play		Play / Slow		6		6
	<<		<< / Tune-		7		7
	>>		>> / Tune+		8		8
	Source		AV / Input / RDS		9		9





Originale		Sostituto	
0	0	HDMI - BAT 0	0
↶	Recall	RETURN BACK	Back / Return
FAV	Fav	PC FAV MARKER	Fav / Marker / PC
▲ VOL	Vol +	+ VOL	Vol+
PICTURE	Picture	FORMAT PICTURE	Picture / Format
NICAM/A2	Nicam / A2	LANG I/II AUDIO	Audio / Lang I/II
▲ CH	CH +	+ CH PAGE	CH+ / Page+
▼ VOL	Vol -	- VOL	Vol-
SOUND	Sound	TITLE SOUND	Sound / Title
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
▼ CH	CH -	- CH PAGE	CH- / Page-
[Red]	Red	NETFLIX SEARCH	Red / Netflix / Search
[Green]	Green	APP REPEAT	Green / APP / Repeat
[Yellow]	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
[Blue]	Blue / Screen	Prime Video RANDOM	Blue / Prime Video / Random
TV/TXT SETUP	Setup / TV/Txt	OPT-TOOLS SETUP	Setup / OPT /
CANCEL D-MENU	D-Menu /	TOP MENU D.MENU	D.Menu / Top

Cancel

Menu

Originale		Sostituto	
REVEAL TITLE	Title / Reveal	SHIFT + TITLE SOUND	Shift + Sound / Title
PRO	PRO	SHIFT + MEDIA DISPLAY	Shift + Display / Media
HOLD LAN	LAN / Hold	SHIFT + LIST SMART	Shift + Smart / List
SIZE A-B	Size / A-B	SIZE ZOOM	Zoom / Size
SUBPAGE GOTO	Goto / Subpage	GOTO TEXT	Text / Goto
INDEX SLOW	Index / Slow	ANGLE INFO	Info / Angle

