


 



 










 



 


 


 
 


 
 
 
 
 


 
 
 


 



 







 







 
 



 

 

 
 

 

 
 
 
 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Internet/PIP		Media
	HDMI/Control		Smart		1		1
	Rec		Rec		2		2
	Stop		Stop		3		3
	Play		Play		4		4
	Pause		Pause		5		5
	<<		<<		6		6
	>>		>>		7		7
	l<<		l<<		8		8
	>>l		>>l		9		9
	Red/Zoom/↑ ↓		Red		0		0
	Green/Repeat/↓		Green		Text		Text
	Yellow/Root		Yellow		Info		Info
	Blue/Title		Blue		Source		AV
	Screen		Format		OK		Ok
	Lang		Dual		Up		Up
	Subtitle		Subt		Down		Down





Originale	Sostituto
 Right	 Right
 Left	 Left
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Mute	 Mute
 Return	 Back
 Swap	 Pre Ch
 FAV	 Shift + Pre Ch
 EPG	 Guide
 Sleep	 Sleep
 Search Mode	 Shift + AV
 Ball/Angle	 Options
 Display	 Shift + Info
 Presets	 TV/R

Originale	Sostituto

