



Originale	Sostituto
 Standby	 Power
 Input Up	 Ch +
 Input Down	 Ch -
 Timer	 AV
 Up	 Up
 Down	 Down
 Enter	 Ok
 Random CD	 Options
 Stop CD	 Stop
 Pause CD	 Pause
 Play CD	 Play
 Memory CD	 Rec
 Repeat CD	 Text
 I<< CD	 I<<
 >>I CD	 >>I
 Scroll MD	 Subt
 Stop MD	 Blue

Originale	Sostituto
 Pause MD	 Yellow
 Play MD	 Green
 Play Mode MD	 Dual
 Repeat MD	 Shift + Text
 I<< MD	 I<<
 >>I MD	 >>
 Sleep	 Sleep
 A.Presence	 Info
 Clock Call	 Media
 Volume Up	 Vol +
 Volume Down	 Vol -
 Muting	 Mute
 Stop CDR	 1
 Pause CDR	 2
 Play CDR	 3
 Play Mode CDR	 7
 Repeat CDR	 4





Originale	Sostituto	Originale	Sostituto
 I<< CDR	5 5		
 >>I CDR	6 6		
 < Tape	GUIDE Guide		
 Stop Tape	0 0		
 Tape >	FAV PRE-CH Pre Ch		
 << Tape	8 8		
 >> Tape	9 9		
 Tuner Preset Up	Right Right		
 Tuner Preset	Left Left		

Originale	Sostituto

