



Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Up	 Up
 1/VCR/DVR	 1	 Previous Menu/Muting	 Menu / Home
 2/CBL/SAT	 2	 Left/Playlist/Cat	 Left
 3/Game/TV	 3	 Enter	 OK
 4/AUX	 4	 Right/Playlist/Cat	 Right
 5/Multi CH	 5	 Setup	 Setup / OPT /
 6/DVD	 6	 Down	 Down
 7/Tape	 7	 Return	 Back / Return
 8/Tuner	 8	 Pause/<	 Pause / Step / Freeze
 9/CD	 9	 Play	 Play / Slow
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 Stop	 Stop / Hold
 0/11/Dimmer	 0	 <<	 << / Tune-
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 >>	 >> / Tune+
 CH Disc	 CH+ / Page+	 Stereo	 Sound / Title
 CH Disc Album-	 CH- / Page-	 Surround	 Eject / Surround
 Vol+	 Vol+	 < Listening Mode	 Shift + Left
 Vol-	 Vol-	 Listening Mode >	 Shift + Right

Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Up	 Up
 1/VCR/DVR	 1	 Previous Menu/Muting	 Menu / Home
 2/CBL/SAT	 2	 Left/Playlist/Cat	 Left
 3/Game/TV	 3	 Enter	 OK
 4/AUX	 4	 Right/Playlist/Cat	 Right
 5/Multi CH	 5	 Setup	 Setup / OPT /
 6/DVD	 6	 Down	 Down
 7/Tape	 7	 Return	 Back / Return
 8/Tuner	 8	 Pause/<	 Pause / Step / Freeze
 9/CD	 9	 Play	 Play / Slow
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 Stop	 Stop / Hold
 0/11/Dimmer	 0	 <<	 << / Tune-
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 >>	 >> / Tune+
 CH Disc	 CH+ / Page+	 Stereo	 Sound / Title
 CH Disc Album-	 CH- / Page-	 Surround	 Eject / Surround
 Vol+	 Vol+	 < Listening Mode	 Shift + Left
 Vol-	 Vol-	 Listening Mode >	 Shift + Right





Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Enter	 OK
 1/VCR/DVR	 1	 Right/Playlist/Cat	 Right
 2/CBL/SAT	 2	 Setup	 Setup / OPT /
 3/Game/TV	 3	 Down	 Down
 4/AUX	 4	 Return	 Back / Return
 5/Multi CH	 5	 Pause/<	 Pause / Step / Freeze
 6/DVD	 6	 Play	 Play / Slow
 7/Tape	 7	 Stop	 Stop / Hold
 8/Tuner	 8	 <<	 << / Tune-
 9/CD	 9	 >>	 >> / Tune+
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 <<	 << / Preset-
 0/11/Dimmer	 0	 >>	 >> / Preset+
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 Stereo	 Sound / Title
 Guide/Top	 D.Menu / Top	 Surround	 Eject / Surround
 Up	 Up	 < Listening Mode	 CH- / Page-
 Previous Menu/Muting	 Menu / Home	 Listening Mode >	 CH+ / Page+
 Left/Playlist/Cat	 Left	 Test Tone/Audio	 Audio / Lang I/II

Originale	Sostituto	Originale	Sostituto
 Enter	 OK	 Enter	 OK
 Right/Playlist/Cat	 Right	 Enter	 OK
 Setup	 Setup / OPT /	 Enter	 OK
 Down	 Down	 Enter	 OK
 Return	 Back / Return	 Enter	 OK
 Pause/<	 Pause / Step / Freeze	 Enter	 OK
 Play	 Play / Slow	 Enter	 OK
 Stop	 Stop / Hold	 Enter	 OK
 <<	 << / Tune-	 Enter	 OK
 >>	 >> / Tune+	 Enter	 OK
 <<	 << / Preset-	 Enter	 OK
 >>	 >> / Preset+	 Enter	 OK
 Stereo	 Sound / Title	 Enter	 OK
 Surround	 Eject / Surround	 Enter	 OK
 < Listening Mode	 CH- / Page-	 Enter	 OK
 Listening Mode >	 CH+ / Page+	 Enter	 OK
 Test Tone/Audio	 Audio / Lang I/II	 Enter	 OK





Originale		Sostituto		Originale		Sostituto	
	CH Sel/Subtitle		Smart / List				
	Level-/Random		Blue / Prime Video / Random				
	Level+/Repeat		Green / APP / Repeat				
	Display		Display / Media				
	Play Mode VCR		AV / Input / RDS				
	L.Night/DVD		Sleep / Timer				
	Cine FLTR/HDD		TV/Radio /				





Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Pause / <	 Pause / Step / Freeze
 1/VCR/DVR	 1	 Play	 Play / Slow
 2/CBL/SAT	 2	 Stop	 Stop / Hold
 3/Game/TV	 3	 <<	 << / Tune-
 4/AUX	 4	 >>	 >> / Tune+
 5/Multi CH	 5	 I<<	 I<< / Preset-
 6/DVD	 6	 >>I	 >>I / Preset+
 7/Tape	 7	 Stereo	 Audio / Lang I/II
 8/Tuner	 8	 Surround	 Eject / Surround
 9/CD	 9	 < Listening Mode	 Left
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 Listening Mode >	 Right
 0/11/Dimmer	 0	 Level-/Random	 Blue / Prime Video / Random
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 Level+/Repeat	 Green / APP / Repeat
 Disc/Album	 CH+ / Page+	 Display	 Display / Media
 Disc/Album CH-	 CH- / Page-		
 Vol+	 Vol+		
 Vol-	 Vol-		

Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Pause / <	 Pause / Step / Freeze
 1/VCR/DVR	 1	 Play	 Play / Slow
 2/CBL/SAT	 2	 Stop	 Stop / Hold
 3/Game/TV	 3	 <<	 << / Tune-
 4/AUX	 4	 >>	 >> / Tune+
 5/Multi CH	 5	 I<<	 I<< / Preset-
 6/DVD	 6	 >>I	 >>I / Preset+
 7/Tape	 7	 Stereo	 Audio / Lang I/II
 8/Tuner	 8	 Surround	 Eject / Surround
 9/CD	 9	 < Listening Mode	 Left
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 Listening Mode >	 Right
 0/11/Dimmer	 0	 Level-/Random	 Blue / Prime Video / Random
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 Level+/Repeat	 Green / APP / Repeat
 Disc/Album	 CH+ / Page+	 Display	 Display / Media
 Disc/Album CH-	 CH- / Page-		
 Vol+	 Vol+		
 Vol-	 Vol-		





Originale		Sostituto		Originale		Sostituto	
	Standby		Power		<<		<< / Tune-
	1/VCR/DVR		1		Stereo		Audio / Lang I/II
	2/CBL/SAT		2		Surround		Eject / Surround
	3/Game/TV		3		< Listening Mode		Left
	4/AUX		4		Listening Mode >		Right
	5/Multi CH		5		Play Mode/VCR		OK
	6/DVD		6		L.Night/DVD		Sleep / Timer
	7/Tape		7				
	8/Tuner		8				
	9/CD		9				
	+10/10/-/-/D.Tun		Guide / EPG / -/-				
	0/11/Dimmer		0				
	Disc/Album		CH+ / Page+				
	Disc/Album CH-		CH- / Page-				
	Pause/<		Pause / Step / Freeze				
	Play		Play / Slow				
	Stop		Stop / Hold				

