



Originale	Sostituto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10/0	0
>10	GUIDE
CLR	FAV PRE-CH
PLAY MODE	SHIFT + PLAY MODE Shift + Play
GROUP/SEARCH	SEARCH TV/R
MEMORY	REC MODE Rec
ENTER	OK Ok
BAND	B Green

Originale	Sostituto
FM MODE	A Red
TUNER PRESET+	Up
TUNER PRESET-	Down
TUNING UP	Right
TUNING DOWN	Left
INPUT UP	+ CH Ch +
INPUT DOWN	- CH Ch -
DIMMER	APP MEDIA Media
DISPLAY	DISPLAY INFO Info
VOL+	+ VOL Vol +
VOL-	- VOL Vol -
MUTING	MUTE Mute
PAUSE	Pause
PLAY	PLAY MODE Play
STOP	Stop
<<	<<
>>	>>





Originale		Sostituto		Originale	Sostituto
	I<<		I<<		
	>>I		>>I		
	Random		Options		
	Repeat		Text		
	Scroll		3D		
	Play List Up		List		
	Play List Down		Sleep		
	Album Up		Subt		
	Album Down		Format		
	Menu		Menu		
	Select		Back		
	: Up		Blue		
	: Down		Yellow		

