



























 









 





 





























 



 



 



 



 



 







Originale	Sostituto
 On	 Power
 Standby	 Shift + Power
 V1	 1
 V2	 4
 V3	 7
 Multi CH	 8
 DVD	 2
 Tape	 5
 Tuner	 6
 CD	 3
 Tuner/Dimmer	 0
 Tuner/Dimmer	 Shift + Mute / Dimmer
 Sleep	 Sleep / Timer
 CH/Disc+	 CH+ / Page+
 Vol+	 Vol+
 CH/Disc-	 CH- / Page-
 Vol-	 Vol-

Originale	Sostituto
 SP A/B	 Sound / Title
 Up	 Up
 Muting	 Mute / Dimmer
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stereo	 Red / Netflix / Search





Originale		Sostituto		Originale		Sostituto	
	On		Power		Up		Up
	Standby		Shift + Power		Muting/Previous Menu		Menu / Home
	1		1		Muting/Previous Menu		Mute / Dimmer
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Return		Back / Return
	6		6		Down		Down
	7		7		Setup		Setup / OPT /
	8		8		Pause		Pause / Step / Freeze
	9		9		Play		Play / Slow
	+10		Guide / EPG / -/--		Stop		Stop / Hold
	0		0		<<		<< / Tune-
	CLR		Exit / Cancel / Clear		>>		>> / Tune+
	CH/Disc+		CH+ / Page+		I<<		I<< / Preset-
	CH/Disc-		CH- / Page-		>>I		>>I / Preset+
	Top Menu		D.Menu / Top		Audio		Audio / Lang I/II




 


 


	Originale	Sostituto	Originale	Sostituto
	Subtitle	Subtitle / EQ		
	Random	Blue / Prime Video / Random		
	Repeat	Green / APP / Repeat		
	Display	Display / Media		





Originale	Sostituto
 On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CH/Disc+	 CH+ / Page+
 CH/Disc-	 CH- / Page-
 Guide	 Guide / EPG / -/-
 Up	 Up
 Muting/Previous Menu	 Menu / Home
 Muting/Previous Menu	 Mute / Dimmer

Originale	Sostituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Setup	 Setup / OPT /
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 On CD	 Shift + Power
 Standby CD	 Shift + Mute / Dimmer
 1 CD	 Shift + 1
 2 CD	 Shift + 2
 3 CD	 Shift + 3
 4 CD	 Shift + 4
 5 CD	 Shift + 5





	Originale	Sostituto	
	6 CD	+	Shift + 6
	7 CD	+	Shift + 7
	8 CD	+	Shift + 8
	9 CD	+	Shift + 9
	+10 CD	+	Shift + Guide / EPG / -/-
	0 CD	+	Shift + 0
	CLR CD	+	Shift + Exit / Cancel / Clear
	CH/Disc + CD	+	Shift + CH+ /
	CH/Disc- CD	+	Shift + CH- /
	Pause CD	+	Shift + Pause / Step /
	Play CD	+	Shift + Play /
	Stop CD	+	Shift + Stop /
	<< CD	+	Shift + << /
	>> CD	+	Shift + >> /
	I<< CD	+	Shift + I<< / Preset-
	>>I CD	+	Shift + >>I / Preset+
	Random CD	+	Shift + Blue / Prime Video / Random

	Originale	Sostituto	
	Repeat CD	+	Shift + Green / APP /
	Display CD	+	Shift + Display / Media





Originale	Sostituto
	 Power
	 Shift + Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 CH+ / Page+
	 CH- / Page-
	 Up
	 Left
	 OK

Originale	Sostituto
	 Right
	 Down
	 Setup / OPT /
	 Pause / Step / Freeze
	 Play / Slow
	 Stop / Hold
	 << / Tune-
	 >> / Tune+

