




















 



 

 


 




 
 

 




















 

 
 
 






Originale	Sostituto
 RCVR On	 Power
 RCVR Standby	 Shift + Power
 RCVR Sleep	 Sleep
 RCVR Return	 Back
 RCVR Setup	 Options
 RCVR	 Ch +
 RCVR CH-/Disc-	 Ch -
 RCVR Vol+	 Vol +
 RCVR Vol-	 Vol -
 RCVR CH Sel / Top Menu	 Shift + Menu
 RCVR CH Sel / Top Menu	 D. Menu
 RCVR Test / Menu	 Menu
 RCVR Audio Sel	 Dual
 RCVR Muting	 Mute
 RCVR Up	 Up
 RCVR Left	 Left
 RCVR Enter	 Ok

Originale	Sostituto
 RCVR Right	 Right
 RCVR Down	 Down
 RCVR Level	 Media
 RCVR Level Up	 Smart
 RCVR I<<	 I<<
 RCVR Play	 Play
 RCVR >>I	 >>I
 RCVR <<	 <<
 RCVR Stop	 Stop
 RCVR >>	 >>
 RCVR Rec /	 Rec
 RCVR Play Rev.	 Pause
 Open / Close	 Eject
 RCVR Input Sel.	 1
 RCVR Input Sel.	 2
 RCVR Input Sel.	 3
 RCVR Input Sel.	 4






 



























 



 





 





 



 

 







 

 



 


Originale	Sostituto	Originale	Sostituto
RCVR Input Sel.	5	RCVR Zone 2	Pre Ch
RCVR Input Sel.	6	RCVR Display	Guide
RCVR Input Sel.	7		
RCVR Input Sel.	8		
RCVR Input Sel.	9		
RCVR Input Sel.	0		
RCVR Pure A	Shift + 1		
RCVR Direct	Shift + 2		
RCVR Stereo	Shift + 3		
RCVR Surr.	Shift + 4		
RCVR THX	Shift + 5		
RCVR All St.	Shift + 6		
RCVR ◀ DSP	Shift + 7		
RCVR DSP ▶	Shift + 8		
RCVR Re-EQ	Shift + 9		
RCVR Dimmer	Shift + 0		
RCVR Display	Info		

Originale	Sostituto	Originale	Sostituto
RCVR Zone 2	Pre Ch		
RCVR Display	Guide		





Originale		Sostituto		Originale		Sostituto	
	DVD On		Power		DVD Play		Play
	DVD Standby		Shift + Power		DVD >>I		>>I
	DVD Sleep		Sleep		DVD <<		<<
	DVD Return		Back		DVD Stop		Stop
	DVD Setup		Options		DVD >>		>>
	DVD Disc+		Ch +		DVD Random		Rec
	DVD Disc-		Ch -		DVD Pause		Pause
	DVD Vol+		Vol +		DVD Eject		Exit
	DVD Vol-		Vol -		DVD Input Sel.		1
	DVD CH Sel / Top Menu		Shift + Menu		DVD Input Sel. CD		2
	DVD CH Sel / Top Menu		D. Menu		DVD Input Sel. V1		3
	DVD Test /		Menu		DVD Input Sel. V2		4
	DVD Audio Sel / TV/VCR		TV/R		DVD Input Sel. V3		5
	Muting		Mute		DVD Input Sel.		6
	DVD Angle /		Format		DVD Input Sel. V3		7
	DVD Subtitle / Level+		Subt		DVD Input Sel. V4		8
	DVD I<<		I<<		DVD Input Sel. V5		9














 













 





 

 

 





 



 



 






Originale	Sostituto
DVD Input Sel. PH	0
DVD 1	+ Shift + 1
DVD 2	+ Shift + 2
DVD 3	+ Shift + 3
DVD 4	+ Shift + 4
DVD 5	+ Shift + 5
DVD 6	+ Shift + 6
DVD 7	+ Shift + 7
DVD 8	+ Shift + 8
DVD 9	+ Shift + 9
DVD 0	+ Shift + 0
DVD +10 / --/--	Guide
DVD Search/Enter	Pre Ch

Originale	Sostituto




 



 



 

 





 



 



 



 






 

 

 
 
 








 

 
 
 

 
 
 

 








Originale		Sostituto		Originale		Sostituto	
	On		Power		2		2
	Standby		Shift + Power		3		3
	Disc+		Ch +		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	Muting		Mute		7		7
	Subtitle		Subt		8		8
	I<<		I<<		9		9
	Play		Play		0		0
	>>I		>>I		+10		Guide
	<<		<<				
	Stop		Stop				
	>>		>>				
	Pause		Pause				
	Random		Rec				
	Eject		Eject				
	1		1				





Originale		Sostituto		Originale		Sostituto	
	NET A		Smart		Play		Play
	On		Power		>>		>>
	Standby		Shift + Power		<<		<<
	Sleep		Sleep		Stop		Stop
	Display		Info		>>		>>
	Setup		Options		Rec / Random		Rec
	CH+ / Disc+		Ch +		Pause / Play Rev.		Pause
	CH- / Disc-		Ch -		Eject / Repeat		Exit
	Vol+		Vol +		Eject / Repeat		Text
	Vol-		Vol -		Album		Red
	Up		Up		Artist		Green
	Left		Left		Genere		Yellow
	Enter		Ok		Playlist		Blue
	Right		Right		1 / Symbols		1
	Down		Down		2 / ABC		2
	Muting		Mute		3 / DEF		3
	I<<		I<<		4 / GHI		4



