 










 


 



 






















 




 


 





 
















Originale		Sostituto		Originale		Sostituto	
	Power Receiver		Power		CD		Shift + 3
	1		1		D.TUN		Smart / List
	VCR / DVR		Shift + 4		Dimmer		Shift + Mute / Dimmer
	2		2		0		0
	CBL / SAT		Shift + 0		Sleep		Sleep / Timer
	3		3		CH+		CH+ / Page+
	4		4		Vol+		Vol+
	AUX		Shift + 7		CH-		CH- / Page-
	5		5		Vol-		Vol-
	Multi CH		Shift + 1		SP A/B		Info / Angle
	6		6		Up		Up
	DVD		Shift + 2		Muting		Mute / Dimmer
	7		7		Left		Left
	TAPE		Shift + 5		Enter		OK
	8		8		Right		Right
	TUNER		Shift + 6		Setup		Setup / OPT /
	9		9		Down		Down





Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/10/-/-	Guide / EPG / -/-
0/11	0
CLR/12/Sleep	Sleep / Timer
CLR/12/Sleep	Exit / Cancel / Clear
Guide/Top	D.Menu / Top
Up	Up
Previous Menu/Muting	Menu / Home

Originale	Sostituto
Left/Playlist/Cat-	Left
Enter	OK
Right/Playlist/Cat	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stereo	Sound / Title
Surround	Eject / Surround
< Listening Mode	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+



 


















 










 




Originale	Sostituto	Originale	Sostituto
Power	Power	Vol-	Vol-
1	1	Pause	Pause / Step / Freeze
2	2	Play	Play / Slow
3	3	Stop	Stop / Hold
4	4	<<	<< / Tune-
5	5	>>	>> / Tune+
6	6	I<<	I<< / Preset-
7	7	>>I	>>I / Preset+
8	8	Stereo	Audio / Lang I/II
9	9	Surround	Eject / Surround
+10/10/-/-	Guide / EPG / -/-	< Listening Mode	Shift + I<< / Preset-
0	0	Listening Mode >	Shift + >>I / Preset+
CLR/12/Sleep	Sleep / Timer	Level-/Random	Blue / Prime Video / Random
CLR/12/Sleep	Exit / Cancel / Clear	Level+/Repeat	Green / APP / Repeat
Disc/Album	CH+ / Page+	Display	Display / Media
Vol+	Vol+		
Disc/Album CH-	CH- / Page-		

Originale	Sostituto	Originale	Sostituto
Power	Power	Vol-	Vol-
1	1	Pause	Pause / Step / Freeze
2	2	Play	Play / Slow
3	3	Stop	Stop / Hold
4	4	<<	<< / Tune-
5	5	>>	>> / Tune+
6	6	I<<	I<< / Preset-
7	7	>>I	>>I / Preset+
8	8	Stereo	Audio / Lang I/II
9	9	Surround	Eject / Surround
+10/10/-/-	Guide / EPG / -/-	< Listening Mode	Shift + I<< / Preset-
0	0	Listening Mode >	Shift + >>I / Preset+
CLR/12/Sleep	Sleep / Timer	Level-/Random	Blue / Prime Video / Random
CLR/12/Sleep	Exit / Cancel / Clear	Level+/Repeat	Green / APP / Repeat
Disc/Album	CH+ / Page+	Display	Display / Media
Vol+	Vol+		
Disc/Album CH-	CH- / Page-		





Originale	Sostituto
 Standby / On	 Power
 VCR/DVR	 4
 CBL/SAT	 0
 AUX	 7
 Multi CH	 1
 DVD	 2
 Tape	 5
 Tuner	 6
 CD	 3
 D.Tun	 Smart / List
 Dimmer	 Shift + Dimmer / Mute
 CLR / Sleep	 Sleep / Timer
 CLR / Sleep	 Exit / Cancel / Clear
 CH Disc	 CH+ / Page+
 Vol+	 Vol+
 CH Disc Album-	 CH- / Page-
 Vol-	 Vol-

Originale	Sostituto
 Up	 Up
 Muting	 Mute / Dimmer
 Left/Playlist/Cat-	 Left
 Enter	 OK
 Right/Playlist/Cat+	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Rev. Play	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 Stereo	 Audio / Lang I/II
 Surround	 Eject / Surround
 < Listening Mode	 I<< / Preset-
 Listening Mode >	 >>I / Preset+



