






 















 



 

 










Originale		Sostituto		Originale		Sostituto	
	On		Power		Muting		Mute / Dimmer
	Standby		Shift + Power		Level Down		CH- / Page-
	Sleep		Sleep / Timer		Level Up		CH+ / Page+
	Return		Back / Return		I<<		I<< / Preset-
	Setup		Setup / OPT /		Play		Play / Slow
	Disc+		Shift + CH+ /		>>I		>>I / Preset+
	Up		Up		<<		<< / Tune-
	Vol+		Vol+		Stop		Stop / Hold
	Disc-		Shift + CH- /		>>		>> / Tune+
	Left		Left		Rec / Random		Rec / Rec Mode
	Enter		OK		Pause / Play Rev.		Pause / Step / Freeze
	Right		Right		Open / Close		Shift + Eject / Surround
	Vol-		Vol-		Input Sel. DVD		2
	Down		Down		Input Sel. CD		3
	Audio		Audio / Lang I/II		Input Sel. V1		1
	CH Sel		Smart / List		Input Sel. V2		4
	Test		Text / Goto		Input Sel. T1		5





Originale	Sostituto
 ON	 Power
 STDBY	 Shift + Power
 Return	 Back / Return
 Setup	 Setup / OPT /
 Disc+	 CH+ / Page+
 Up	 Up
 Vol+	 Vol+
 Disc-	 CH- / Page-
 Left	 Left
 Enter	 OK
 Right	 Right
 Vol-	 Vol-
 Down	 Down
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Muting	 Mute / Dimmer
 Angle	 Info / Angle

Originale	Sostituto
 Subtitle	 Subtitle / EQ
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Originale	Sostituto
ON	Power
STDBY	Shift + Power
Vol+	Vol+
Enter	OK
Enter	Fav / Marker / PC
Vol-	Vol-
Muting	Mute / Dimmer
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Rec / Random	Rec / Rec Mode
Rec / Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround

Originale	Sostituto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/-
0	0

