












 



 


















 


 
 

 
 


 
 
 

 
 
 

 



 
 

 










Originale		Sostituto		Originale		Sostituto	
	Power On		Power		I<<		I<<
	Power/Standby		Shift + Power		Play		Play
	Sleep		Sleep		>>I		>>I
	Display/DVD		Media		<<		<<
	OSD Menu		Menu		Stop		Stop
	CH+		Ch +		>>		>>
	CH-		Ch -		Rec		Rec
	Vol+		Vol +		Pause		Pause
	Vol-		Vol -		Eject		Eject
	Up		Up		DVD		Options
	Left		Left		CD		Text
	Enter		Ok		T1		Format
	Right		Right		T2		Dual
	Down		Down		Tun		AV
	Exit/Return		Exit		PH		3D
	Test/Tv/VCR		TV/R		V1		Red
	Muting		Mute		V2		Green






 






 
 
 


 



 


 
 








 





 















 


Originale		Sostituto	
	V3		Yellow
	V4		Blue
	1/Stereo		1
	2/Direct		2
	3/DSP>		3
	4/Surround		4
	5/THX		5
	6/DSP<		6
	7/Re-EQ		7
	8/CH Sel		8
	9/Level+		9
	+10/Late Night		Guide
	0/Dimmer		0
	ENT/Level-		Pre Ch

Originale	Sostituto





Originale		Sostituto		Originale		Sostituto	
	Power		Power		1		1
	Display DVD		Media		2		2
	OSD Menu		Menu		3		3
	Up		Up		4		4
	Left		Left		5		5
	Enter		Ok		6		6
	Right		Right		7		7
	Down		Down		8		8
	Exit/Return		Exit		9		9
	I<<		I<<		0		0
	Play		Play		+10		Guide
	>>I		>>I		Ent		Pre Ch
	<<		<<				
	Stop		Stop				
	>>		>>				
	Pause		Pause				
	Eject		Eject				





Originale		Sostituto		Originale		Sostituto	
	Play		Play		8		8
	Stop		Stop		9		9
	Pause		Pause		+10		Guide
	I<<		I<<		0		0
	>>		>>				
	Track		Smart				
	Disc		Media				
	>>I		>>I				
	Eject		Eject				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				





Originale		Sostituto	
	Power		Power
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	>>		>>
	Rec		Rec
	Pause		Pause
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originale		Sostituto	
	8		8
	9		9
	+10		Guide
	Ent		Pre Ch

