



 


 



 






































 




 







 

 






Originale	Sostituto	Originale	Sostituto
 RCVR On	 Power	 RCVR Test / Menu	 Menu
 RCVR Standby	 Shift + Power	 RCVR Audio	 Dual
 RCVR Sleep	 Sleep	 RCVR Level	 Media
 RCVR Return	 Back	 RCVR Level Up	 Smart
 RCVR Setup	 Options	 RCVR I<<	 I<<
 RCVR Disc+	 Ch +	 RCVR Play	 Play
 RCVR Disc-	 Ch -	 RCVR >>I	 >>I
 RCVR Up	 Up	 RCVR <<	 <<
 RCVR Left	 Left	 RCVR Stop	 Stop
 RCVR Enter	 Ok	 RCVR >>	 >>
 RCVR Right	 Right	 RCVR Rec /	 Rec
 RCVR Down	 Down	 RCVR Pause / Play Rev.	 Pause
 RCVR Vol+	 Vol +	 Open / Close	 Eject
 RCVR Vol-	 Vol -	 RCVR Input Sel.	 1
 RCVR Muting	 Mute	 RCVR Input Sel.	 2
 RCVR CH Sel / Top Menu	 Shift + Menu	 RCVR Input Sel.	 3
 RCVR CH Sel / Top Menu	 D. Menu	 RCVR Input Sel.	 4








 







 












 










 


 


 

 



 



 
 



 



 






Originale		Sostituto	
	RCVR Input Sel.		5
	RCVR Input Sel.		6
	RCVR Input Sel.		7
	RCVR Input Sel.		8
	RCVR Input Sel.		9
	RCVR Input Sel.		0
	RCVR Stereo		Shift + 1
	RCVR Direct		Shift + 2
	RCVR DSP ►		Shift + 3
	RCVR SURR		Shift + 4
	RCVR THX		Shift + 5
	RCVR ◀ DSP		Shift + 6
	RCVR SP A		Shift + 7
	RCVR SP B		Shift + 8
	RCVR Re-EQ		Shift + 9
	RCVR Dimmer		Shift + 0
	RCVR Display		Info

Originale		Sostituto	
	RCVR Display		Guide
	RCVR Zone 2		Pre Ch










 



 














 



 

 






 








 





Originale		Sostituto		Originale		Sostituto	
	ON		Power		Subtitle		Subt
	STDBY		Shift + Power		I<<		I<<
	Return		Back		Play		Play
	Setup		Options		>>I		>>I
	Disc+		Ch +		<<		<<
	Disc-		Ch -		Stop		Stop
	Up		Up		>>		>>
	Left		Left		Random		Text
	Enter		Ok		Pause		Pause
	Right		Right		Open / Close		Eject
	Down		Down		1		1
	Vol+		Vol +		2		2
	Vol-		Vol -		3		3
	Muting		Mute		4		4
	Top Menu		D. Menu		5		5
	Menu		Menu		6		6
	Angle		Format		7		7



























Originale		Sostituto		Originale		Sostituto	
	ON		Power		3		3
	STDBY		Shift + Power		4		4
	Disc+		Ch +		5		5
	Vol+		Vol +		6		6
	Vol-		Vol -		7		7
	Muting		Mute		8		8
	I<<		I<<		9		9
	Play		Play		0		0
	>>I		>>I		+10		Guide
	<<		<<				
	Stop		Stop				
	>>		>>				
	Random		Text				
	Pause		Pause				
	Open / Close		Eject				
	1		1				
	2		2				





Originale		Sostituto		Originale		Sostituto	
	ON		Power		3		3
	STDBY		Shift + Power		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	Muting		Mute		7		7
	I<<		I<<		8		8
	Play		Play		9		9
	>>I		>>I		0		0
	<<		<<		+10		Guide
	Stop		Stop		Enter		Pre Ch
	>>		>>		Enter		Ok
	Rec / Random		Text				
	Rec / Random		Rec				
	Pause		Pause				
	Open / Close		Eject				
	1		1				
	2		2				

