



| Originale | Sostituto |
|-------------------------|-----------------------|
| On | Power |
| Standby | Shift + Power |
| Input Selector V1 | 1 |
| Input Selector V2 | 4 |
| Input Selector V3 | 7 |
| Input Selector Multi CH | 8 |
| Input Selector | 2 |
| Input Selector | 5 |
| Input Selector Tuner | 6 |
| Input Selector CD | 3 |
| Dimmer | Shift + Mute / Dimmer |
| Sleep | Sleep / Timer |
| CH/Disc+ | CH+ / Page+ |
| Vol+ | Vol+ |
| CH/Disc- | CH- / Page- |
| Vol- | Vol- |
| SP A/B | Menu / Home |

| Originale | Sostituto |
|-------------------|------------------------|
| Up | Up |
| Muting | Mute / Dimmer |
| Left | Left |
| Enter | OK |
| Right | Right |
| Return | Back / Return |
| Down | Down |
| Setup | Setup / OPT / |
| Pause /< | Pause / Step / Freeze |
| Play | Play / Slow |
| Stop | Stop / Hold |
| << / Tune- | << / Tune- |
| >> / Tune+ | >> / Tune+ |
| I<< / Preset- | I<< / Preset- |
| >>I / Preset+ | >>I / Preset+ |
| List. Mode Stereo | Red / Netflix / Search |
| List. Mode | Eject / Surround |





| Originale | Sostituto |
|--|---|
|  On |  Power |
|  Standby |  Shift + Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  +10 |  Guide / EPG / -/-- |
|  0 |  0 |
|  CLR |  Exit / Cancel / Clear |
|  CH/Disc+ |  CH+ / Page+ |
|  CH/Disc- |  CH- / Page- |
|  Top Menu |  D.Menu / Top |

| Originale | Sostituto |
|--|---|
|  Up |  Up |
|  Menu |  Menu / Home |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Return |  Back / Return |
|  Down |  Down |
|  Setup |  Setup / OPT / |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  Stop |  Stop / Hold |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  Audio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |



