



Originale	Sostituto
On / Standby	Power
Input Selector V1	1
Input Selector V2	4
Input Selector V3	7
Input Selector Multi CH	8
Input Selector DVD	2
Input Selector TAPE	5
Input Selector TUNER	6
Input Selector CD	3
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
Power Tv	Shift + Power
Vol+ Tv	Shift + Vol+
CH/Disc/Album	CH+ / Page+
Vol+	Vol+
Input Tv	Shift + AV / Input / RDS
Vol- Tv	Shift + Vol-

Originale	Sostituto
CH/Disc/Album-	CH- / Page-
Vol-	Vol-
Guide/Top	Guide / EPG / -/-
Guide/Top	D.Menu / Top
Up	Up
Muting	Mute / Dimmer
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Setup	Setup / OPT /
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+





Originale		Sostituto		Originale		Sostituto	
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Listening Mode Stereo		Subtitle / EQ				
	Listening Mode Surround		Eject / Surround				
	Listening Mode <		Sound / Title				
	Listening Mode >		Audio / Lang I/II				
	Test Tone		Red / Netflix / Search				
	CH Sel		Green / APP / Repeat				
	Level-		Yellow / YouTube / Repeat				
	Level+		Blue / Prime Video / Random				
	Display		Display / Media				
	L.Night		Zoom / Size				
	Cine FLTR		Picture / Format				





Originale	Sostituto	Originale	Sostituto
Power	Power	Left/Playlist/Cat-	Left
1	1	Enter	OK
2	2	Right/Playlist/Cat	Right
3	3	Return	Back / Return
4	4	Down	Down
5	5	Setup	Setup / OPT /
6	6	Pause	Pause / Step / Freeze
7	7	Play	Play / Slow
8	8	Stop	Stop / Hold
9	9	<<	<< / Tune-
+10/10/-/-	Guide / EPG / -/-	>>	>> / Tune+
0/11	0	<<	<< / Preset-
CLR	Exit / Cancel / Clear	>>	>> / Preset+
Top Menu	D.Menu / Top	Stereo	Shift + Subtitle / EQ
Up	Up	Surround	Shift + Eject / Surround
Previous Menu/Muting	Menu / Home	< Listening Mode	Shift + Sound / Title
Previous Menu/Muting	Mute / Dimmer	Listening Mode >	Shift + Lang I/II

Originale	Sostituto	Originale	Sostituto
Power	Power	Left/Playlist/Cat-	Left
1	1	Enter	OK
2	2	Right/Playlist/Cat	Right
3	3	Return	Back / Return
4	4	Down	Down
5	5	Setup	Setup / OPT /
6	6	Pause	Pause / Step / Freeze
7	7	Play	Play / Slow
8	8	Stop	Stop / Hold
9	9	<<	<< / Tune-
+10/10/-/-	Guide / EPG / -/-	>>	>> / Tune+
0/11	0	<<	<< / Preset-
CLR	Exit / Cancel / Clear	>>	>> / Preset+
Top Menu	D.Menu / Top	Stereo	Shift + Subtitle / EQ
Up	Up	Surround	Shift + Eject / Surround
Previous Menu/Muting	Menu / Home	< Listening Mode	Shift + Sound / Title
Previous Menu/Muting	Mute / Dimmer	Listening Mode >	Shift + Lang I/II






	Originale	Sostituto
	Audio	Audio / Lang I/II
	Subtitle	Subtitle / EQ
	Random	Blue / Prime Video / Random
	Repeat	Green / APP / Repeat
	Display	Display / Media
	VCR	Shift + 4
	Play Mode VCR	Picture / Format
	DVD	Shift + 2
	HDD	Shift + 7

Originale	Sostituto





	Originale	Sostituto
	On / Standby	 Power
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	+10/10/-/-	 Guide / EPG / -/-
	0/11	 0
	12	 Fav / Marker / PC
	Disc+	 CH+ / Page+
	Vol+	 Vol+
	Disc-	 CH- / Page-
	Vol-	 Vol-

	Originale	Sostituto
	Pause	 Pause / Step / Freeze
	Play	 Play / Slow
	Stop	 Stop / Hold
	<<	 << / Tune-
	>>	 >> / Tune+
	I<<	 I<< / Preset-
	>>I	 >>I / Preset+
	Stereo	 Subtitle / EQ
	Surround	 Eject / Surround
	< Listening Mode	 Sound / Title
	Listening Mode >	 Audio / Lang I/II
	Random	 Blue / Prime Video / Random
	Repeat	 Green / APP / Repeat
	Display	 Display / Media





Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/10/--	Guide / EPG / --
0/11	0
CH+	CH+ / Page+
CH-	CH- / Page-
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold

Originale	Sostituto
<<	<< / Tune-
Stereo	Subtitle / EQ
Surround	Eject / Surround
< Listening Mode	Sound / Title
Listening Mode >	Audio / Lang I/II
Play Mode	D.Menu / Top
L.Night	Sleep / Timer

